


Z-series

KANGAROO REMOTE-CONTROL MOTORCADDIE

Update effective July 2022

Quick Start Guide

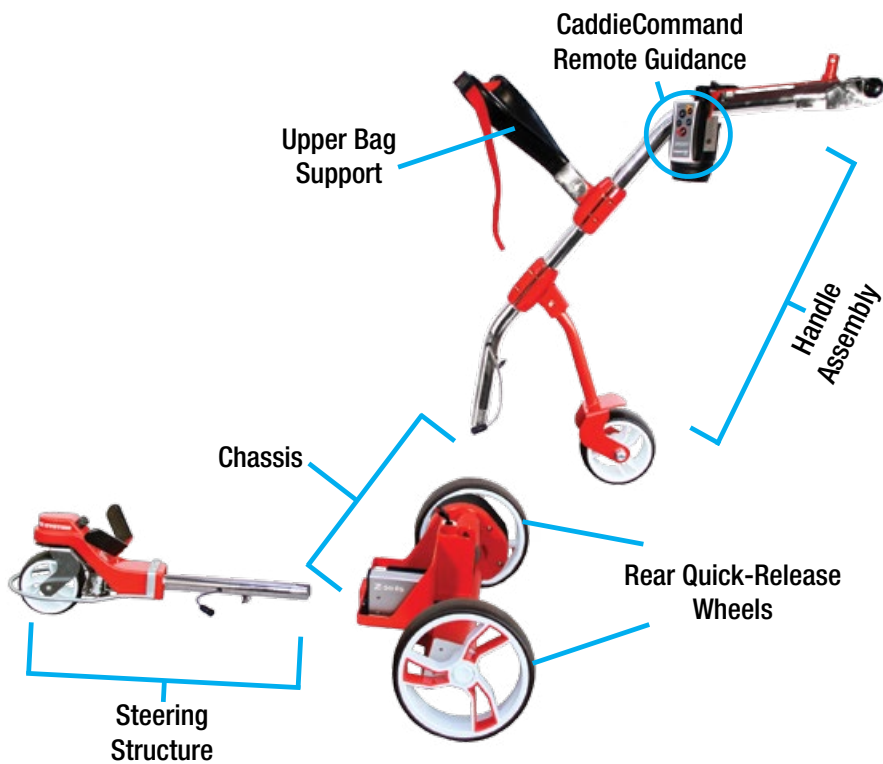

Your Kangaroo Z-series will arrive in five separate pieces. They are the handle, chassis, two rear push-button release wheels, and steering structure.

Step 1: Attach Rear Wheels

- Remove protective covers from main axle.
- On outside of rear wheels, locate and push wheel release button.
- Place wheel on axle, aligning drive pins on axle with four holes in wheel panel.



Push quick-release button.



Inserting wheel on axle.

Free Wheeling Mode

Free-wheeling allows the rear wheels to turn freely without engaging drivetrain. If you need to pull or push your caddy without power, always put it in Free-Wheeling mode first. This prevents strain on gears.

Push release button on outside of wheel. Slide wheel outward slightly on the axle. Release button to allow it to lock in the proper groove. When the hub is locked onto the free-wheel groove, the wheel will not slide off.

Step 2: Attach Steering Structure

- Open draw latch under battery tray.
- Insert steering structure into hole in front of battery tray and secure draw latch.
- Attach wire plug from steering structure to receptacle on Z-box.



Steering Structure being inserted into chassis.



Attaching electrical connection to Z-box.

Step 3: Attach Handle Assembly

- Open draw latch on top of chassis.
- Insert handle assembly into hole and secure draw latch.
- Attach wire plug to receptacle on backside of Z-box.
- Remove three plastic tie-wrap bands from handle.

Inserting handle assembly into chassis.



Be sure to twist collar when attaching and detaching wire.

Attach wire from handle to back of Z-box. Be sure to unplug wire from Z-box before removing handle assembly to avoid damage.


Manual Operation

Before putting your bag on and hitting the links, practice using manual and remote operation.


- Set function switch to OFF.
- Place battery on battery tray and plug in specially designed T-bar.
- Set speed control all the way down, set the function switch to MANUAL, and slowly adjust control to increase speed.



Connecting T-bar to battery. Make sure T-bar is solidly connected matching positive to positive and negative to negative.

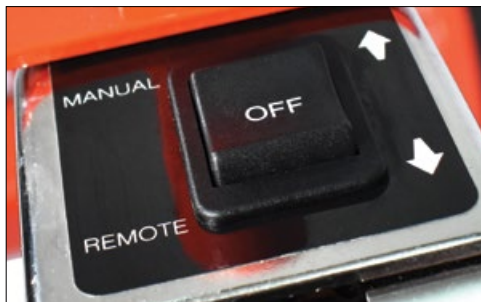

Function Switch

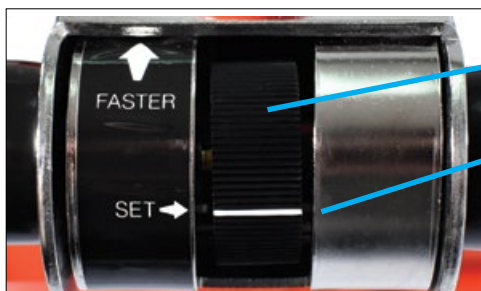

Speed Control:

SET is recommended speed in remote mode.

Remote Control

Toggle function switch to REMOTE and adjust speed control to desired setting. SET is the recommended speed to start with.

- **GO:** Caddie will travel at speed selected on speed control.
- **FAST:** Caddie will travel at top speed. Green light blinks to confirm command. Press GO to return to speed selected on speed control.
- **LEFT:** Front wheel will turn left. Let-off button to re-center.
- **RIGHT:** Front wheel will turn right. Let-off button to re-center.
- **STOP:** Caddie will stop. Red light blinks to confirm command.



For safety reasons, caddie will automatically shut off if no command is given within 20 seconds.

Your radio receiver (on the chassis) responds to LEFT or RIGHT commands within a shorter range than ON or OFF signals. Therefore, beyond 40 yards from your transmitter, be aware your motorcaddie may not respond to a LEFT or RIGHT keypad command.

Also, your transmitter should stay at least 6 feet away from any other remote-control Kangaroo playing in your group, when pushing any button (except OFF) to send a keypad command.

Fully Charge Battery

Attach charger to port on left side of battery, then plug charger in. When green light turns on, battery is fully charged. Disconnect battery from charger when charge is complete. After any round, even 9 holes, fully recharge battery after use.



Load Your Golf Bag

Upper Bag Support is adjustable to accommodate height of your golf bag. Use provided 5/32" allen wrench to detach and reattach clamp at desired position.

Adjust Alignment Knob

If front wheel is misaligned, adjust with black steering knob.

- Toggle function switch to remote.
- Turn steering knob on front of Z-box until front wheel is back to center.



Contact John Raines



Remote transmitter comes from factory equipped with two AA batteries, in back compartment. LO BAT amber warning light comes on, upper left of keypad, to signal need for immediate battery replacement.

John Raines

Customer Service

800-438-3011 ext. 2400

johnraines@KangarooGolf.com

For more information:

www.kangarogolf.com/faq/z-series-faqs.html