

Kangaroo
VORTEX™
THE GOLF EXERCISE MACHINE

QUICK START GUIDE



 
Your Kangaroo Vortex will arrive in five separate pieces. They are the handle, chassis, rear wheels and front wheel assembly.

Step 1: Attach Rear Wheels to Chassis

- Remove protective covers from main axle.
- On outside of rear wheels, locate and push wheel release button.
- Place wheel on axle, aligning drive pins on axle with four holes in wheel panel.



Push wheel release button.

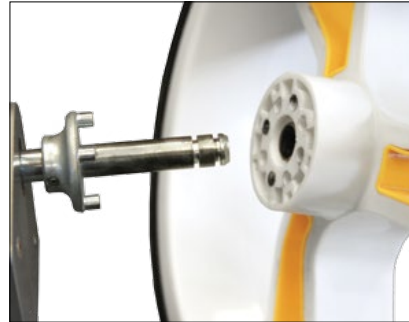

Insert wheel on axle by aligning drive pins.

Free Wheeling Mode

Free-wheeling allows the rear wheels to turn freely without engaging drive train. If you need to pull or push your caddy without power, always put it in Free-Wheeling mode first. This prevents strain on gears.

Push release button on outside of wheel. Slide wheel outward slightly on the axle. Release button to allow it to lock in the proper groove. When the hub is locked onto the free-wheel groove, the wheel will not slide off.

Step 2: Attach Front Wheel Assembly to Chassis

- Open draw latch under battery tray.
- Insert front wheel assembly into hole in front of battery tray and secure draw latch.



Step 3: Attach Handle to Chassis

- Open draw latch on top of chassis.
- Insert handle into hole and secure draw latch.
- Remove three plastic tie-wrap bands from handle.
- Plug in handle assembly wire to receptacle on chassis.

Upper Bag Support is adjustable to accommodate height of your golf bag. Use provided 5/32" allen wrench to detach and reattach clamp at desired position.



Attach handle assembly wire to chassis plug.

Step 4: Operation

- Be sure the power switch is set to off.



- Set speed control all the way down (slow) and turn power on. Then, slowly increase speed until you find your desired pace.

AutoBrake 2.0.

Take control on steep declines with AutoBrake 2.0., Kangaroo's new and improved braking system.

AutoBrake 2.0 works like this: As you go down a slope, your caddie will continue to travel at whatever speed you have set. No matter how steep the incline, AutoBrake will adjust its power as needed to maintain the same speed. There are no sudden stops (or bumping into your Kangaroo), and no reason to constantly turn your caddie on and off while navigating hills.

Enjoy the peace of mind and simplicity of enjoying your game and playing at your own pace.



Fully Charge Battery

Go ahead and charge your battery before using your Vortex. To charge battery, attach charger to port on left side of battery, then plug charger into wall socket. When green light turns on, battery is fully charged. Disconnect battery from charger when charge is complete.



After any round, even 9 holes, recharge battery completely and promptly after use.



Connect specially designed T-bar to your battery by matching positive to positive and negative to negative.

Packing & Shipping Material

We suggest saving the box and packing material that was packed with your Vortex in case you need to send in your caddie for repair.



Contact Us



If you have any questions about your Vortex, Natasha Morales at our factory in Columbus, North Carolina will be glad to help you.

Natasha Morales

Customer Service

828-436-2101 ext. 2460

Natasha@KangarooGolf.com

Kangaroo Golf
111 Kangaroo Drive
Columbus, NC 28722

www.KangarooGolf.com